

Simulyzer-Software Operating Help

-Seskion GmbH-


Content:

- Download the Simulyzer software
- Starting the Simulyzer software
- Connecting the Simulyzer
- Overview of the graphical user interface
- First measurement with connected Simulyzer hardware
- Shortcuts
 - Moving the graphical measurement
 - Zooming in the graphical measurement
 - Shifting the graphical measurement
 - Better Overview without Sync pulses
 - Set Cursor Position
- Scaling Data
- Saving and Exporting Data

Version:	(1.0) 05.11.2021 – Creation
	(1.1) 03.12.2021 – Small improvement (Download)
	(1.2) 21.12.2021 – Connecting the Simulyzer
	(1.3) 28.06.2022 – Scaling, Saving and Exporting Data
	(1.4) 27.05.2025 – Set Cursor Position


Simulyzer-Software Operating Help

If you have the Simulyzer Hardware Box, please make sure that you operate in the correct sequence:

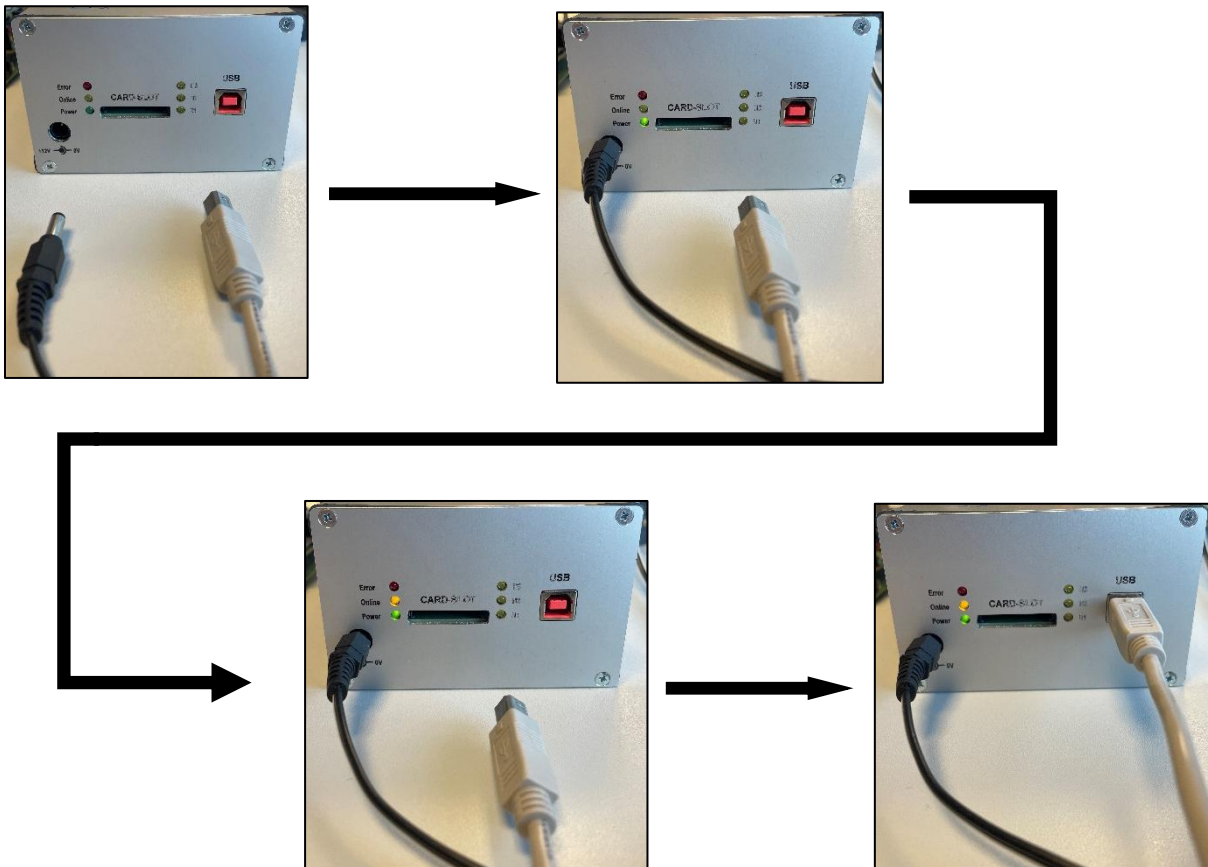


Now you can open the the matching Simulyzer Software.

If you have not yet connected a Simulyzer box to the PC, a short note will appear to inform you that no box has been detected and that the software will therefore only work in offline mode.

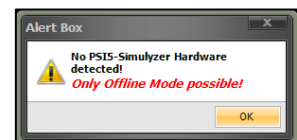


If a Simulyzer box is connected to the PC, or if you have closed the message box with **OK**, you will now see the interface of the Simulyzer software:

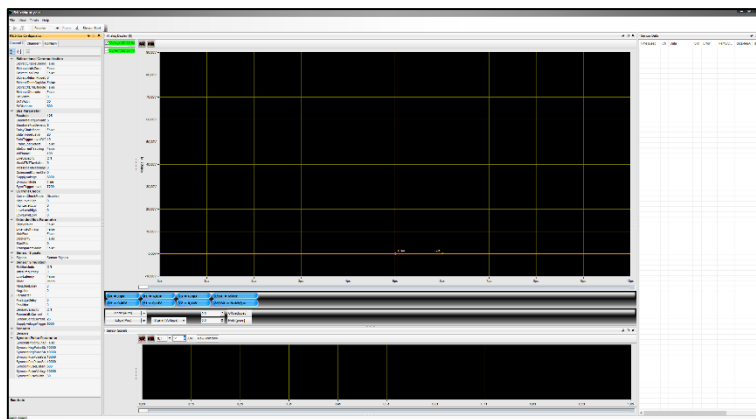

Without a corresponding software license, which is bound to either PC-ID or Simulyzer-Box, you can only view the interface and the individual menu items. For measurements and further functionalities a license is mandatory.

Simulyzer-Software Operating Help

Overview of the graphical user interface

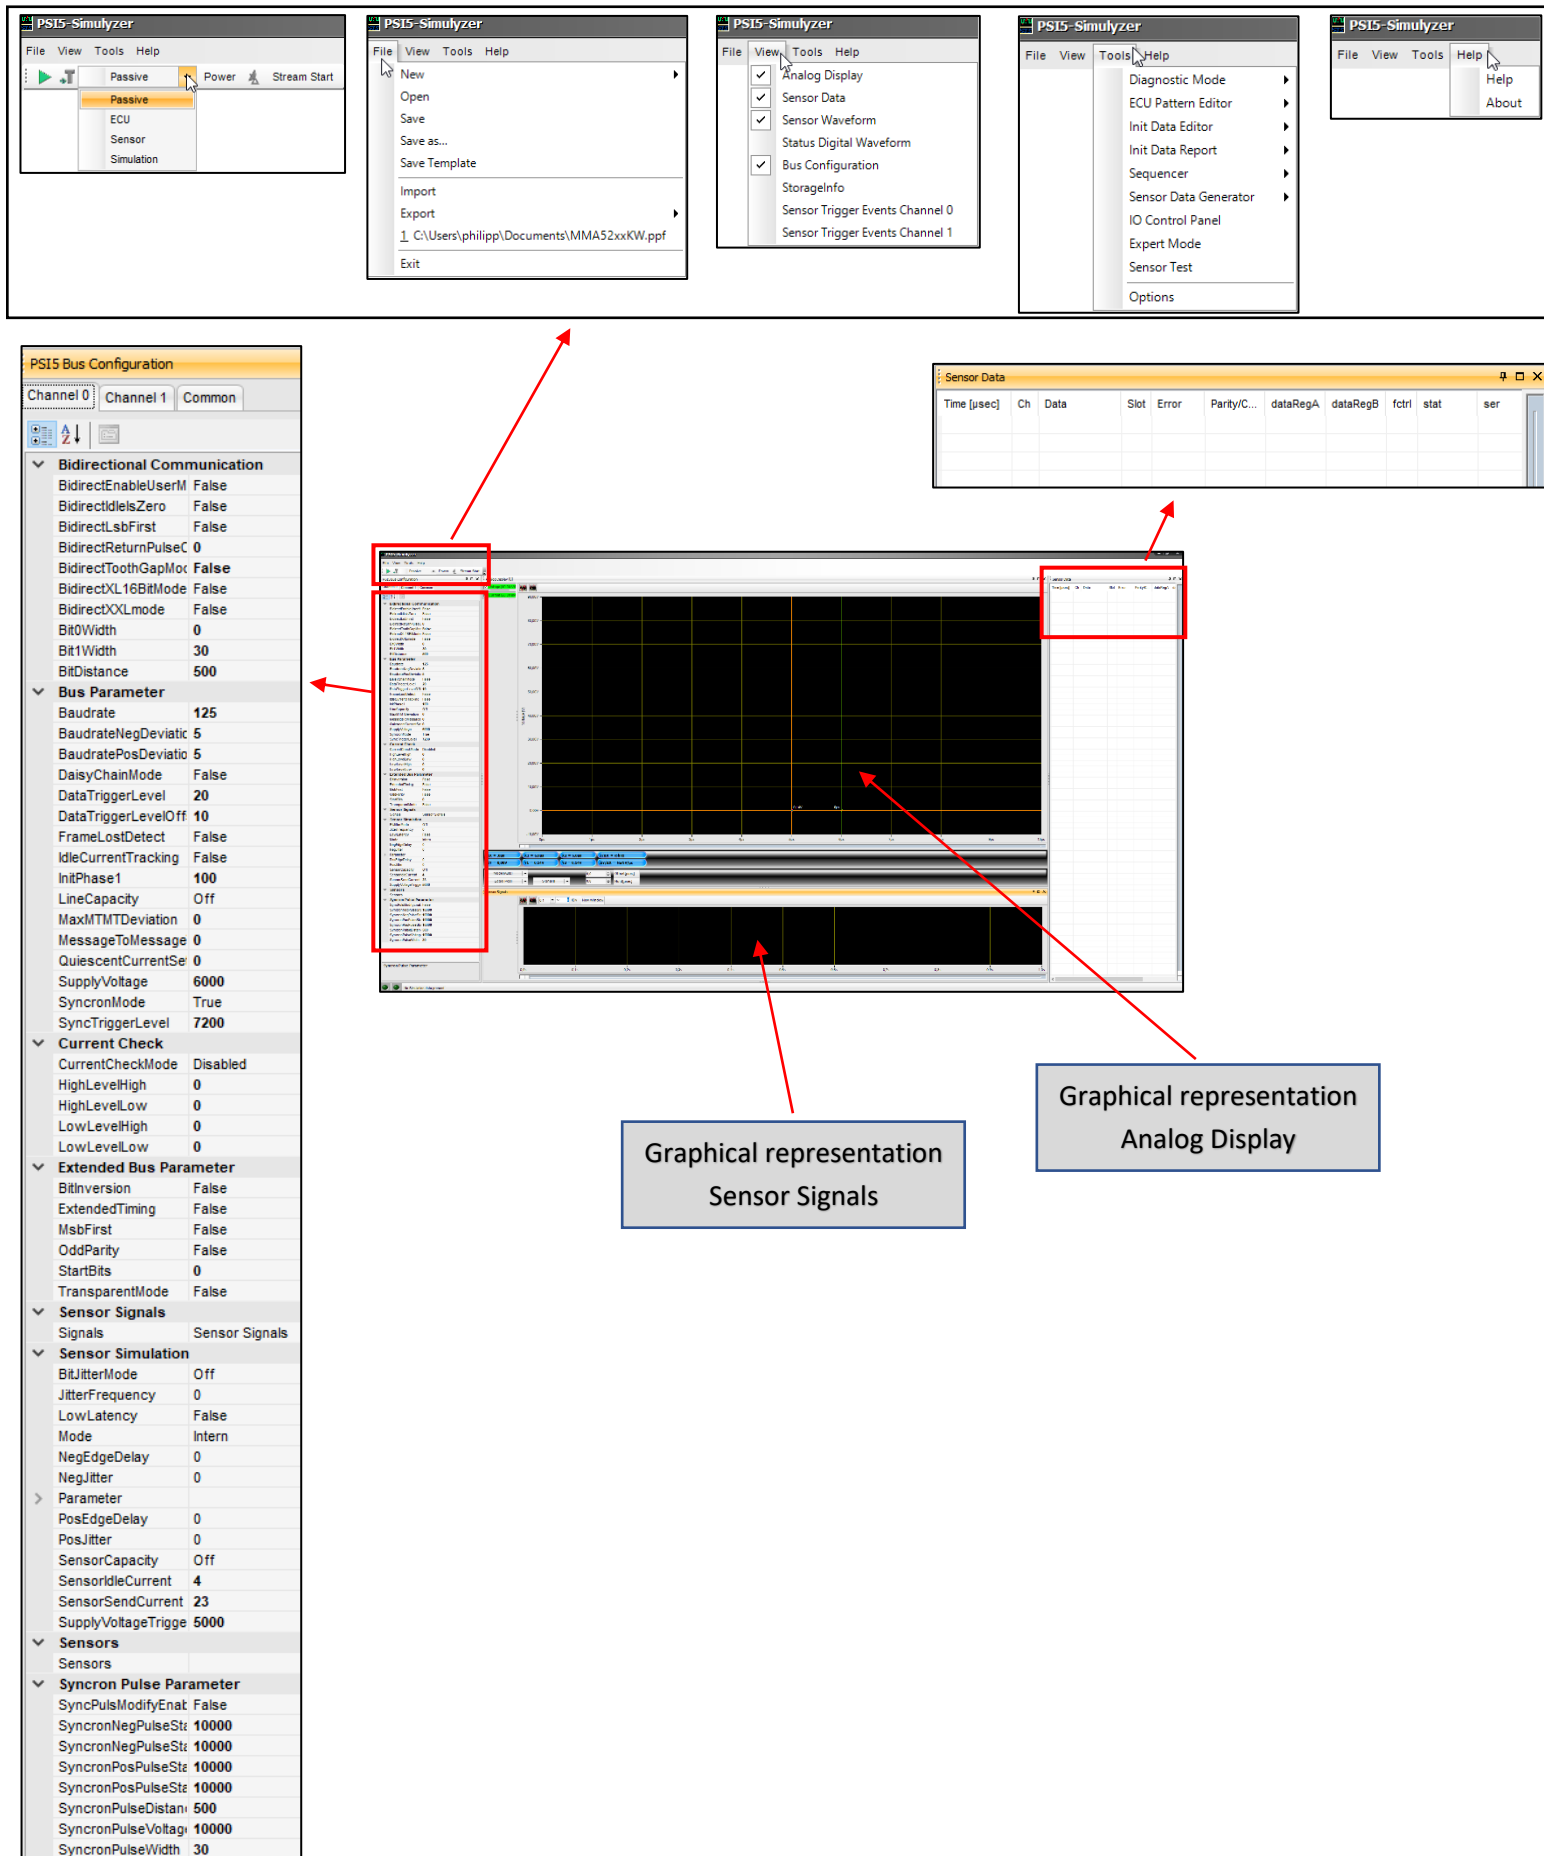

The image displays the PS15-Simulyzer software interface, showing several windows and their components:


- PS15-Simulyzer Main Window:** Contains a menu bar (File, View, Tools, Help) and a toolbar with buttons for Passive, Power, and Stream Start. A dropdown menu is shown under the Passive button, listing ECU, Sensor, and Simulation.
- PS15-Simulyzer File Menu:** Lists options such as New, Open, Save, Save as..., Save Template, Import, Export, and Exit.
- PS15-Simulyzer View Menu:** Lists options such as Analog Display, Sensor Data, Sensor Waveform, Status Digital Waveform, Bus Configuration, StorageInfo, Sensor Trigger Events Channel 0, and Sensor Trigger Events Channel 1.
- PS15-Simulyzer Tools Menu:** Lists options such as Diagnostic Mode, ECU Pattern Editor, Init Data Editor, Init Data Report, Sequencer, Sensor Data Generator, IO Control Panel, Expert Mode, Sensor Test, and Options.
- PS15-Simulyzer Help Menu:** Lists options such as Help and About.
- PS15 Bus Configuration Window:** Contains tabs for Channel 0, Channel 1, and Common. It lists various parameters for Bidirectional Communication, Bus Parameter, Current Check, Extended Bus Parameter, Sensor Signals, Sensor Simulation, and Synchron Pulse Parameter.
- Sensor Data Window:** Displays a table with columns for Time [usec], Ch, Data, Slot, Error, Parity/C..., dataRegA, dataRegB, fcTri, stat, and ser.
- Graphical representation Sensor Signals:** A window showing a waveform plot with a red box highlighting the signal data.
- Graphical representation Analog Display:** A window showing a waveform plot with a red box highlighting the analog display data.

PSI5 Inertial Sensor

The MMA52xxKW family, a SafeAssure solution, includes the AKLV27 and PSI5 Version 1.3 compatible overdamped X-axis satellite accelerometers.

Features

- $\pm 60g$ to $\pm 480g$ Full-Scale Range
- Selectable 400 Hz, 3 Pole, or 4 pole Low-Pass Filter
- Single Pole High Pass Filter with Fast Startup and Output Rate Limiting
- **PSI5 Version 1.3 Compatible**
 - **PSI5-P10P-500/3L Compatible**
 - Programmable Time Slots with 0.5 μs Resolution
 - Selectable Baud Rate: 125 kBaud or 190.5 kBaud
 - Selectable Data Length: 8 or 10 bits
 - Selectable Error Detection: Even Parity, or 3-bit CRC
 - Optional Daisy Chain with External Low Side Switch
 - Two-Wire Programming Mode

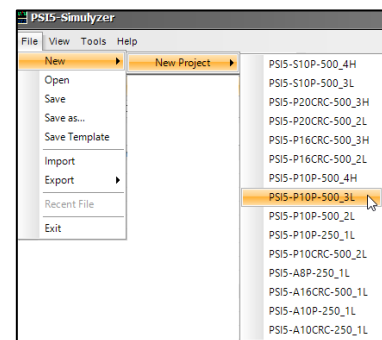

The figure consists of three sequential screenshots of the PSIS-Simulator interface, connected by arrows, illustrating the process of selecting components for simulation.


- First Screenshot:** The application window is titled "PSIS-Simulator - PSIS-P1". The "Tools" menu is open, and the "ECU" option is highlighted by the mouse cursor.
- Second Screenshot:** The application window is titled "PSIS-Simulator - PSIS-P10P-500_3L". The "ECU" component has been added to the workspace. The "Power" component is visible in the top toolbar.
- Third Screenshot:** The application window is titled "PSIS-Simulator - PSIS-P10P-500_3L". The "Power" component in the top toolbar is highlighted by the mouse cursor.

[illegible]

Simulyzer-Software Operating Help


Shortcut: Moving the graphical measurement

If the Analog Display or Sensor Signals is selected and you are inside the diagram with your mouse, you can hold down **CTRL** to get a hand with which you can move the diagram back and forth as you like.

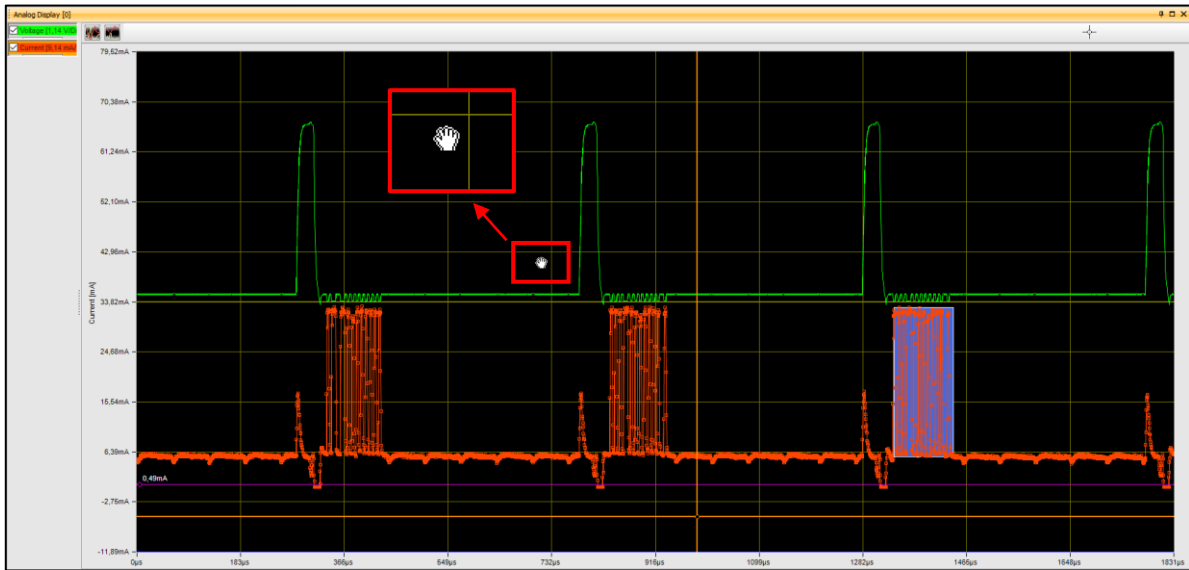


Shortcut: Zooming in the graphical measurement

If the Analog Display or Sensor Signals is selected and you are inside the diagram with your mouse, you can hold down **SHIFT** to zoom in or out with the mouse wheel.

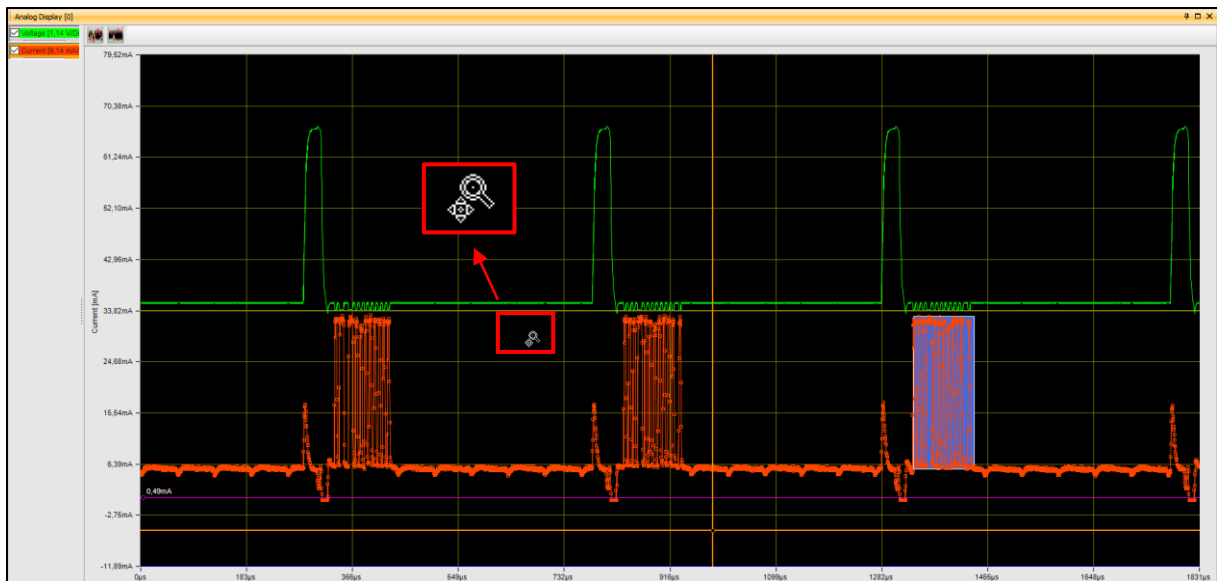

If you want to zoom in on a certain area, you can move around it with the **left mouse button** while holding down **SHIFT**.


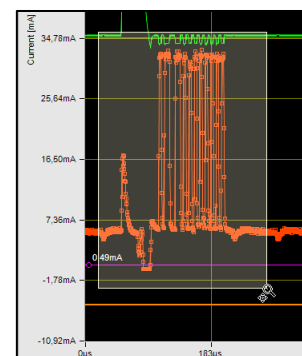


Simulyzer-Software Operating Help

Shortcut: Shifting the graphical measurement


To be able to drag the green (Voltage) and the red (Current) line apart or on top of each other, you can click with the **Left Mouse Button** in the upper left corner of the Analog Display and move it as you like. In addition, you can hide or show the individual lines by checking the respective box. The same applies to the Sensor Signals diagram field.

The buttons next to it offer a similar function. Here you can place the measurements directly above or below each other with the predefined option. As with the manual move function, this function also applies to the diagram field Sensor Signals.

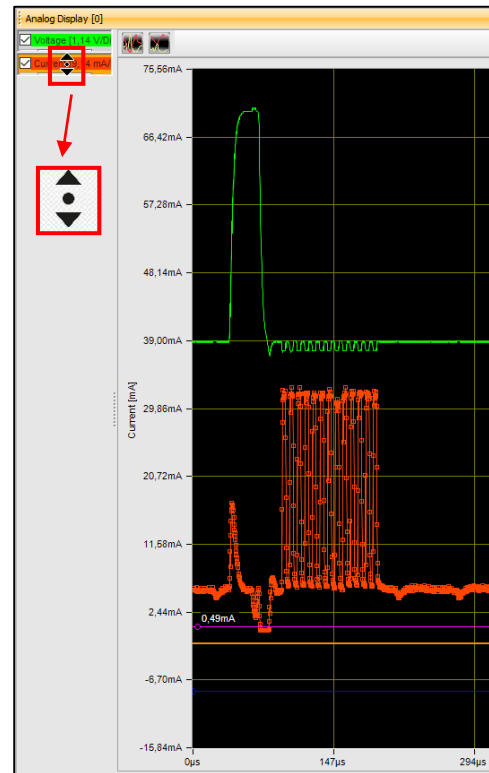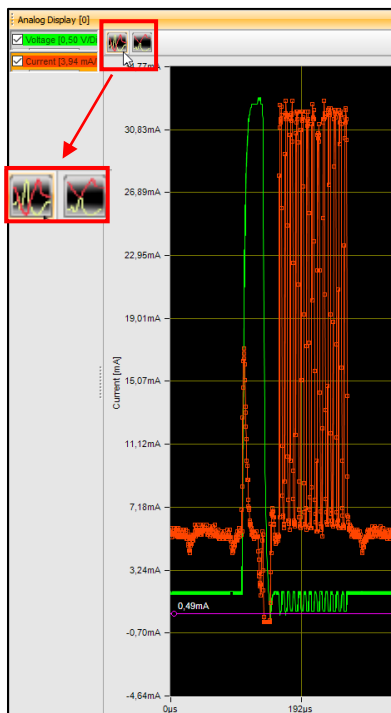

Better Overview without Sync pulses

For a better overview in the Sensor Data you can set the **SynchronMode** in the Bus Configuration on the left on **False**. As a result, the Sync pulses are not displayed in the table.

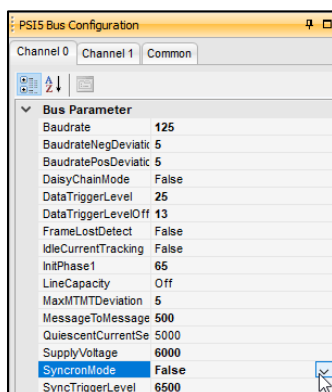


Time [usec]	Ch	Data	Slot	Error	Parity/C...	dataRegA	dataRegB	ctrl	s
19883822	0	0x43	0x0	0x0	1	0x43			
19883822	0	0xa2	0x0	0x0	1	0xa2			
19883822	0	0x1e1	0x0	0x0	1	0x1e1			
19882191	0	0xb2aa226	0...	0x0					
16958037	0	0x0	0x0	0x0	0	0x0			
16958037	0			Sig1	0x0				
16957537	0	0xf	0x0	0x0	0	0xf			
16957537	0			Sig1	0xf				
16957036	0	0x1e1	0x0	0x0	1	0x1e1			
16956405	0	0xb2ab22e	0...	0x0					
16926537	0	0xa	0x0	0x0	0	0xa			
16926537	0			Sig1	0xa				
16926037	0	0xf	0x0	0x0	0	0xf			
16926037	0			Sig1	0xf				
16925536	0	0x1e1	0x0	0x0	1	0x1e1			


Simulyzer-Software Operating Help

Set Cursor Position


To receive the Delta Time between SlotStart and SlotEnd you can measure it with the cursor position. Therefore you need to click with the **Right Mouse Button** into the Analog Display:

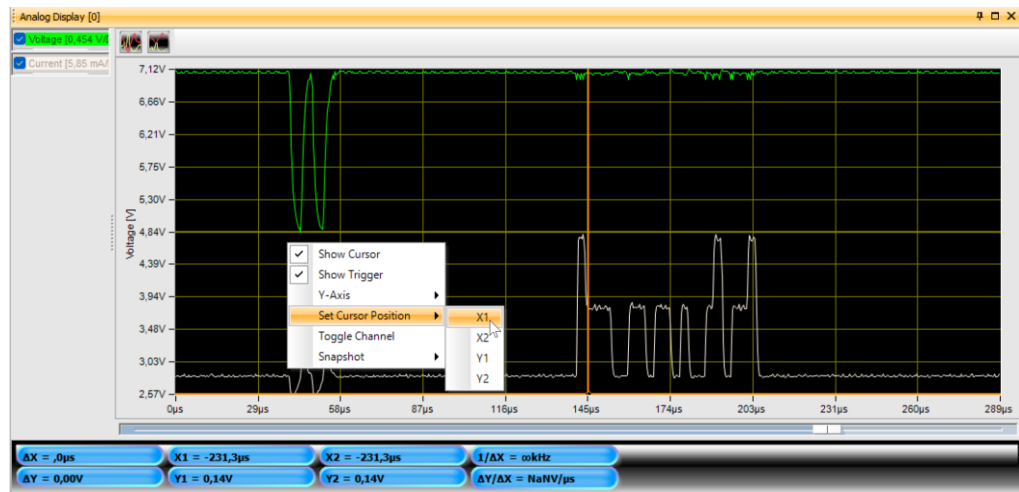

After the X1 is displayed you can adjust it with holding the **Left Mouse Button** and pull the line to right and left:

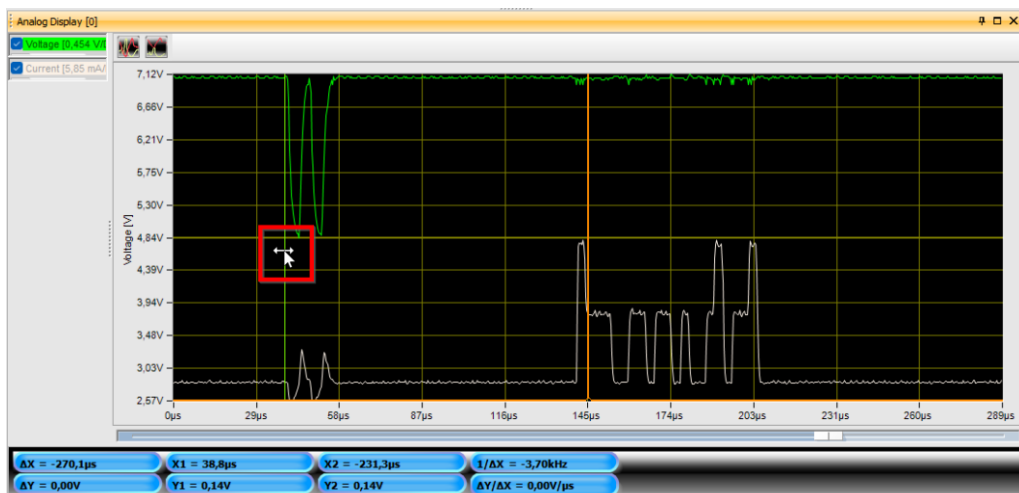

To receive the second cursor, the X2, you also need to click with the **Right Mouse Button** into the Analog Display and select the X2. You can adjust it and see below the Analog Window the values for the Delta between X1 and X2 and the Positions from each cursor. The same could be done with the Y1 and Y2 cursor.

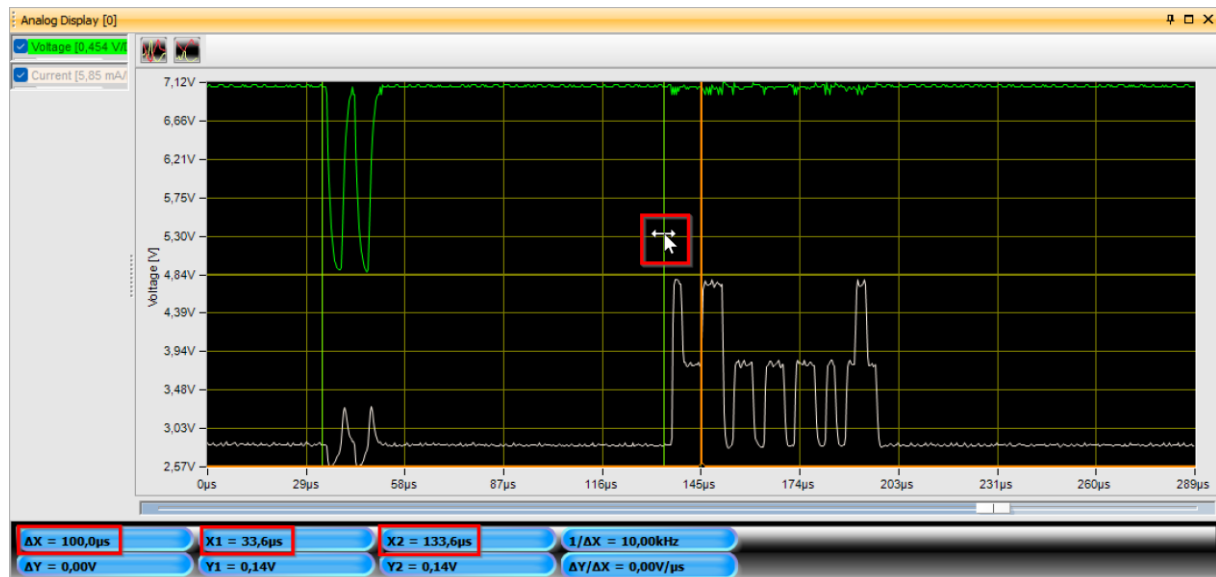

Simulyzer-Software Operating Help


Scaling Data

To get the correct conversion of the displayed LSB (least significant bit) you have to look into the sensor specification first. In the specification the conversion can be found under the sensitivity. In our example the sensor is in normal mode, i.e. in a $\pm 60g$ range. The table shows that 8 LSB correspond to one g (8LSB = 1g).

#	Characteristic	Symbol	Min	Typ	Max	Units
54	Sensitivity (10-bit output @ 100 Hz, referenced to 0 Hz)					
55	$\pm 60g$ Range	* SENS	—	8	—	LSB/g
56	$\pm 120g$ Range	* SENS	—	4	—	LSB/g
57	$\pm 240g$ Range	* SENS	—	2	—	LSB/g
58	$\pm 480g$ Range	* SENS	—	1	—	LSB/g

Now you can set the correct parameters in the software so that the physical values can be seen. For this you go in the left column under **Sensor Signals** to the **Signals** (Sig1, Sig2 or Sig3). There you can adjust and modify some details. In our case we need the **Scale**. Here is always 1LSB entered. And because we know from the sensor specification that 8LSB = 1g, we have to enter 1/8 respectively 0,125 there.


In addition, the two points **TextDisplay** can now be changed to dec and the **Unit** can be changed to g. Finally you can see the changed values in the graph of the Sensor Signals.

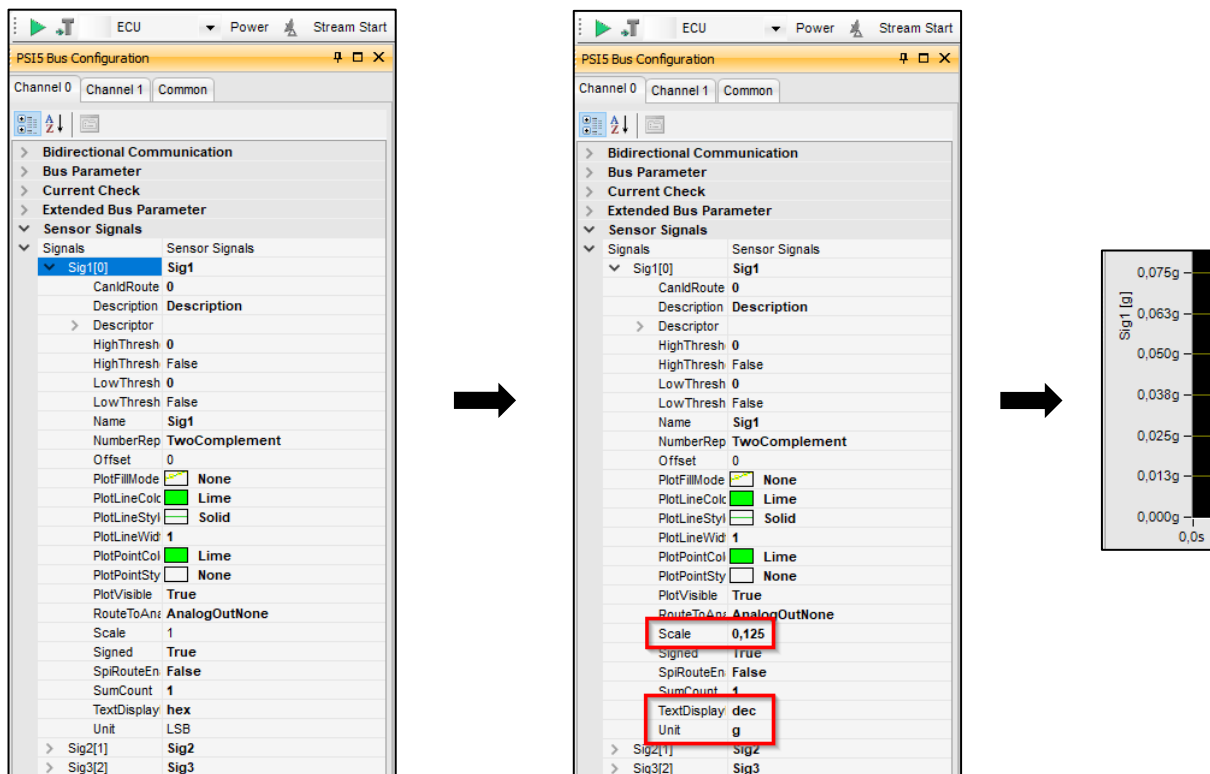


Simulyzer-Software Operating Help

Saving Data

You can save your project and measurements by clicking **File** and **Save as**. Then you can choose the location where you want to save the file and enter the file name. Click on **Save** and your file will be saved.

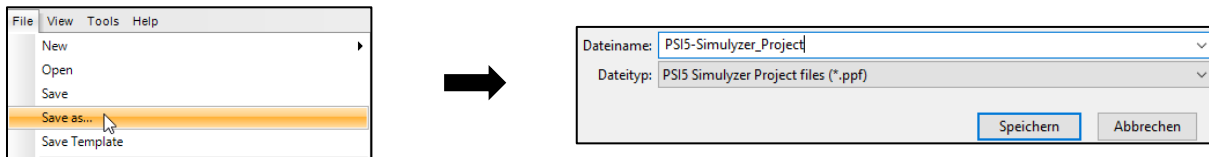


To load the file of your measurements back into the program, click on **File** and then on **Open**. Now you can select the file you have saved into the chosen location and click **Open** to load the file back into the program.

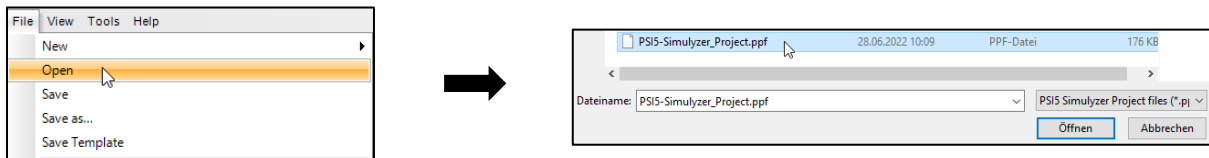


Exporting Data

In order to open data in another program such as Microsoft Excel with a .csv file, you must export the project and your measurement data. To do this, click on **File**, **Export** and **Export Sensor Data**.

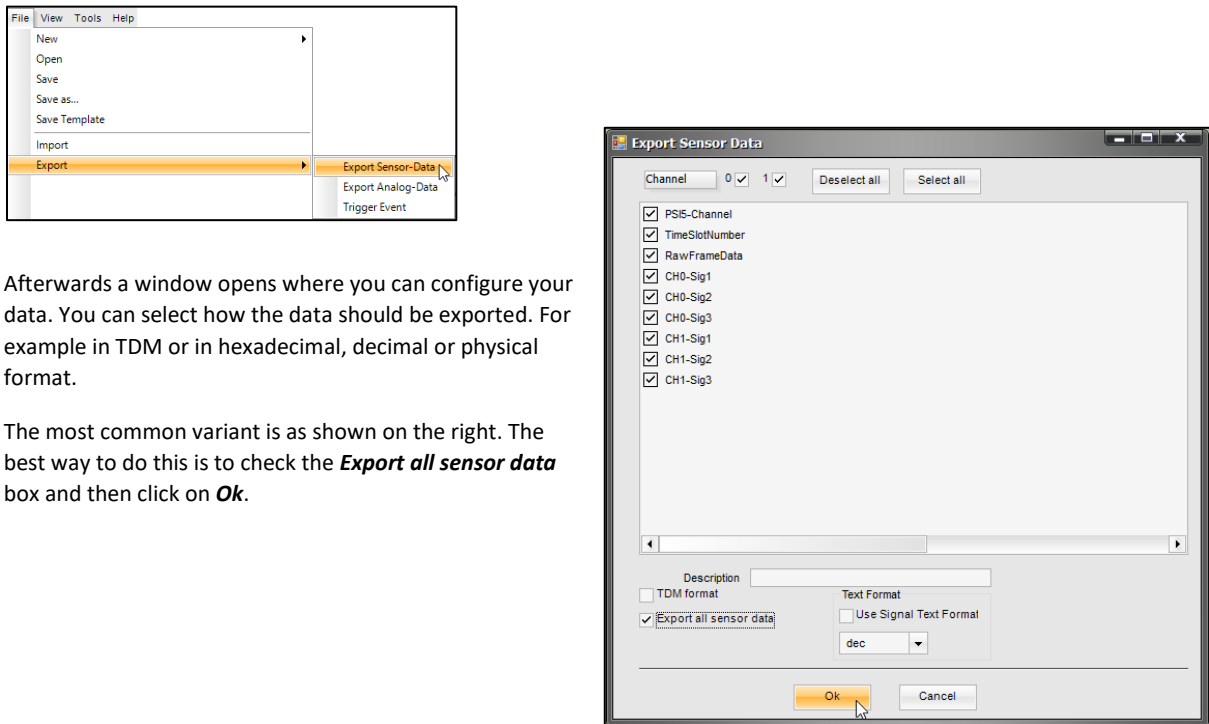

Afterwards a window opens where you can configure your data. You can select how the data should be exported. For example in TDM or in hexadecimal, decimal or physical format.

The most common variant is as shown on the right. The best way to do this is to check the **Export all sensor data** box and then click on **Ok**.



Then you can choose the location where you want to save the file and enter the file name. Click on **Save** and your file will be saved.